

## SOLAR LIGHTING

# SOLS

## Solar Obstruction Light System

### Compliance with Standards

FAA: L-810(L) AC 150/5345-43 (Current Edition) and the FAA Engineering Brief No. 67. Solar equipment exceeds requirements of FAA Engineering Brief No. 76 "Using Solar Power for Airport Obstruction Lighting." L-810 is ETL Certified.

### System Overview

The LED Solar Obstruction Lighting System (SOLS) is an FAA-compliant modular, stand-alone, self-contained solar-powered obstruction warning lighting system for towers and other structures. During the daytime, the solar panel charges the battery. At dusk, the photocell automatically activates the LED obstruction light until dawn. Dusk-to-dawn light control is activated by ambient solar lighting levels (Turn On at 35 foot candles / Turn Off at 52 foot candles) via a FAA-approved photocell.

- The system is designed to require very low maintenance for long periods, while operating in harsh environments.
- The L-810(L) is a steady burning red light fixture marking fixed obstructions to eliminate navigational hazards.
- High-efficiency high-flux LED obstruction light
- Weather- and corrosion-resistant light assembly and housing
- 32.5 cd brightness
- FAA-approved photocell
- Minimum 5-year battery life

### Operation

The LED Solar Obstruction Light operates as follows:

- The solar panel supplies DC current to charge the deep cycle battery operating at 12 V.
- Battery charging is regulated by the pre-installed and wired charge controller in the outdoor-rated battery and controller enclosure.
- The LED fixture is powered by the energy stored in the battery. System design is based on monthly site climate data such that the average solar panel output is greater than the average loading.

### Theory of Operation

The SOLS operates automatically with no need for operator interaction under normal conditions. With normal daylight illumination, the solar panel is capable of producing sufficient current to charge the battery. The charging light indicates the battery is being charged by the solar panel.



### Solar Panel Ordering Code<sup>1</sup>

Solar Panel Size<sup>2</sup>  
1 = 50 W, 12 V, 105 Ahr  
2 = 80 W, 12 V, 139 Ahr

SPS- 000

### Notes


- <sup>1</sup> Contains solar panel power supply only. The obstruction light is ordered separately. See L-810(L) ordering code below.
- <sup>2</sup> See solar sizing map on the last page to determine the size of the solar panel required for specific locations.

### L-810(L) Ordering Code ——— RTO-1R08-001

### Notes

RTO-1R08-001 is for an ETL Certified L-810(L) obstruction light in FAA Red. For ICAO Type A fixtures, contact your ADB Sales Representative.

### Typical System Layout

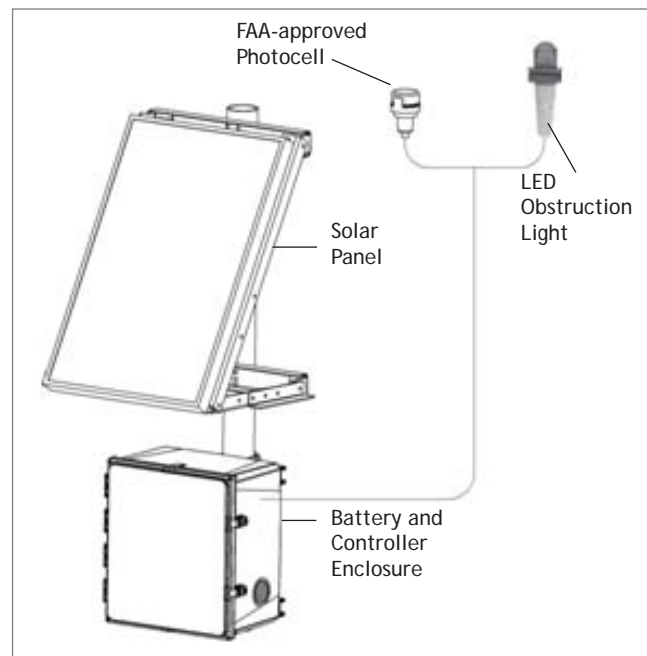

### Theory of Operation (Continued)

If the battery discharges to the pre-set load disconnect voltage due to long periods of poor weather, the low voltage disconnect (LVD) relay is activated, the controller's red LED turns on, and the solar obstruction LED fixture is disconnected. Disconnecting the LED fixture prevents battery damage associated with complete discharge of the battery. The controller's red LED will turn off when the battery recovers to about 50% of its rated capacity and the light fixture is automatically reconnected.

### Solar Panel Orientation

Full solar exposure is critical to the performance of the LED obstruction light. Ensure that the solar panel installation location has year-round, unrestricted sun exposure throughout the day. If required, the solar panel may be attached remotely to the controller using an appropriately-sized transmission cable. The bottom edge of the solar panel should be installed at a minimum height to clear growing vegetation and snow at the site.

#### Notes

- Shading even a small portion of the solar panel will significantly reduce the output of the LED fixture.
- SOLS systems installed at a latitude greater than 55° are subject to special design considerations due to lower levels of solar radiation during the winter months.
- For inclination angle installation, see map in the manual.

### Installation

A solar panel mounting structure is provided for attaching the solar panel to an appropriate support structure or foundation. Instructions for assembling the mount and attaching the solar panel are provided in the mounting structure package.

The panel and enclosure mounting kits are both designed to a standard 4" pipe (outer diameter 4.5"/114 mm), having a wall thickness which is at least schedule 40 (0.237"/6 mm). A short section of pipe (not supplied) can be used to mount the panel and enclosure. The pipe can be attached to the obstruction structure or other location. The units can also be mounted to pipes with sizes as small as 3" (outer diameter 3.5"/89 mm), having a wall thickness which is at least schedule 40 (0.237"/6 mm). Additional fasteners (u-bolts) will be required. The solar panel may be mounted at whatever height is deemed safe.


### Dimensions

Obstruction Light Fixture, Single			
Actual: 3.69 in diameter x 10.8 in height (93.7 mm dia. x 274.3 mm height)			
Controller and Battery Enclosure			
Height <sup>1</sup>	Width <sup>1</sup> (front)	Depth <sup>1</sup> (side)	Weight <sup>2</sup>
19 in (482.6 mm)	18.5 in (469.9 mm)	11.25 in (285.75 mm)	80 lb (36.29 kg)
Solar Panel - 50 W			
Height	Width	Depth	Weight
33 in (839 mm)	21.1 in (537 mm)	1.97 in (50 mm)	13.2 lb (6.0 kg)
Solar Panel - 80 W			
Height	Width	Depth	Weight
47.28 in (1200 mm)	21.1 in (537 mm)	1.81 in (46 mm)	20.94 lb (9.5 kg)

<sup>1</sup> Outside dimensions including the enclosure and protrusions.

<sup>2</sup> The estimated weight of the bare enclosure without solar panel and cabling is 14 lb (6.35 kg).

### Solar Sizing Map

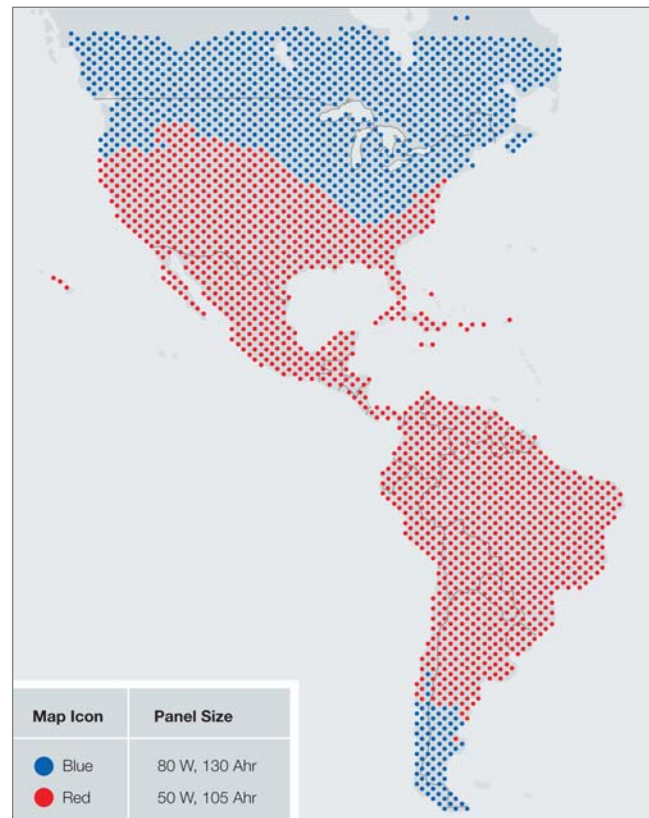

Use the above map to determine the size of the solar panel required for specific locations. See catalog sheet 3037 in the Solar Product Center on our website for full size versions of all solar sizing maps.

Product specifications may be subject to change, and specifications listed here are not binding. Confirm current specifications at time of order.

ADB Airfield Solutions  
Leuvensesteenweg 585  
B-1930 Zaventem  
Belgium

ADB Airfield Solutions, LLC  
977 Gahanna Parkway  
Columbus, OH 43230  
USA

© ADB Airfield Solutions  
All rights reserved

Telephone: +32 (0)2 722.17.11  
www.adb-air.com

Telephone: +1 614.861.1304  
+1 800.545.4157